

Cooker usage

The cooker has a **gas hob** with an **electric fan oven** and **grill**



The electric fan oven and grill

Turn the right hand side knob to the left for the grill, to the right (third) for the oven

The left hand side knob controls the temperature

The gas hob

Turn the knobs on the right hand side and click the ignition button to turn on

Note: There is no automatic safety switch-off / flame failure device for the gas hob



Fan Oven Temperature Conversion Table

Gas	°F	°C	Fan
1	275	140	120
2	300	150	130
3	325	170	150
4	350	180	160
5	375	190	170
6	400	200	180
7	425	220	200
8	450	230	210
9	475	240	220