

How to heat the flat

Setting Timed Heating

(See separate sheet for manually changing the heating)

The gas central heating is via a Logic Max Combi C24 Boiler


The boiler is permanently on.

Therefore, there is no need to touch the controls on the boiler itself.

However, you may want to set some timed heating.

By pulling down the flap, you will see the Timer.

Ignore the Center Remote Thermostat located outside the main double bed bedroom.

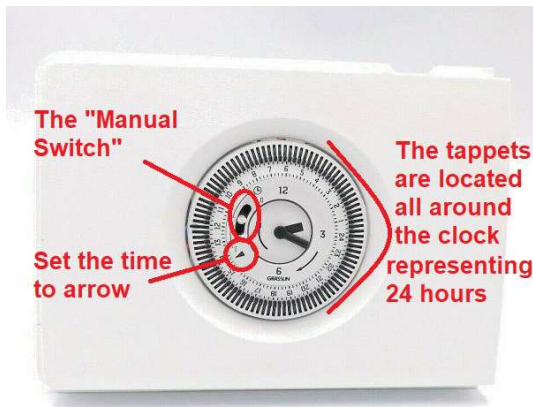

1. To set the time
Align the 24hr current time to the arrow
2. To set the tappets
Set tappets to outer edge for ON periods of heat
Set tappets to inner edge for OFF periods of heat
3. To activate timed heating
Set the "Manual Switch" to the middle slot

See the official sheet for detailed instruction.

RADIATOR NOTE: You can turn the heat up / down at each radiator in each room.