

How to heat the flat

Manually changing the heat

(See separate sheet on timed heating)

The gas central heating is via a Logic Max Combi C24 Boiler

The boiler is permanently on.

Therefore, there is no need to touch the controls on the boiler itself.

Simply use the Center Remote Thermostat to move the heat temperature up or down.

This is located outside the main double bed bedroom.



Use these 2 buttons
to change the heat
up or down

Ignore this button

NOTE: "The Display" above shows the room temperature.
After you change the heat, "The Display" goes back to showing the room temperature.

RADIATOR NOTE: You can turn the heat up / down at each radiator in each room.