

Electric cooker usage

(Flavel Model FLS64FX)

The cooker has a electric hob with an electric oven and grill



The electric oven and grill

Middle controls (with clock)
Please ignore these leave these controls alone

Right hand control
This knob changes the temperature of the oven

Left hand control

- Turn left hand nob to 2 o'clock for light to turn on (no oven)
- Turn left hand nob to 5 o'clock for fan to turn on (no oven)
- Turn left hand nob to 6 o'clock for oven to come on
- Turn left hand nob to 7 o'clock for grill
- Turn left hand nob to 11 o'clock for grill (with fan)

There is no oven grill handle (health and safty reasons) – Please use the oven gloves



The electric fan

- There are five buttons on the fan.
From left to right;
- 1 – Stops the fan
 - 2 – Fan starts (Speed 1)
 - 3 – Fan starts (Speed 2)
 - 4 – Fan starts (Speed 3)
 - 5 – Fan light to light up hob



The electric hob

Turn the knobs on the right hand side
There is no ignition switch required

Note: There is no automatic safety switch that turns the hob off