

How to heat the flat (Part 2 of 3)

Every room is fitted with a electric Dimplex Quantum QM150 Storage Heater.

USING THE HEATER FOR OVERNIGHT STORAGE AND HEATING THE ROOM

The Basics

Each heater has a LCD display with touch user interface.
This allows a preset heating to be set (Eg, overnight storage of heating)
as well as simple dial turning temperature control and booster options.

Comfort On = Heat is being delivered
Comfort Off = Heat is NOT being delivered

Note that there can be a delay of up to two minutes for the fan to
come on while switching between "Comfort On" and "Comfort Off".

Confirm the time / date is correct

Should only need doing once and can be ignored

Knowing / setting the temperature

The temperature shown on the display is the room temperature "set point".
This is the temperature that the heater will maintain during the 'Comfort On' periods.
If the room temperature is above this temperature then the fan will not operate.

The heater leaves the factory with this temperature set at 21°C (and has been kept at)
which represents a typical, comfortable room temperature.

What is the Timer set for? / When will the heating come on?

Currently, the bedroom and kitchen heaters are set for "Out All Day" and
the lounge area heater is set for "Home All Day"

Out All Day	Home All Day
5:00 → 8:30	6:30 → 9:30
17:00 → 22:00	11:00 → 13:00
	15:00 → 17:00
	18:00 → 22:00

"Holiday Mode is just used by us (The Owners) to turn the heating off temporarily