

# Four Slice Toaster usage



The 6 buttons are duplicated to control the left 2 and right 2 bread compartments

- Put your bread in and push the leaver down
- The top button cancels and the toast pops up
- The middle is a reheat option
- The bottom button is a defrost option