


Washing machine usage

The washing machine / tumble dryer is in the kitchen

**ALWAYS USE THE “DRAIN & SPIN” OPTION BEFORE
OPENING THE DOOR**

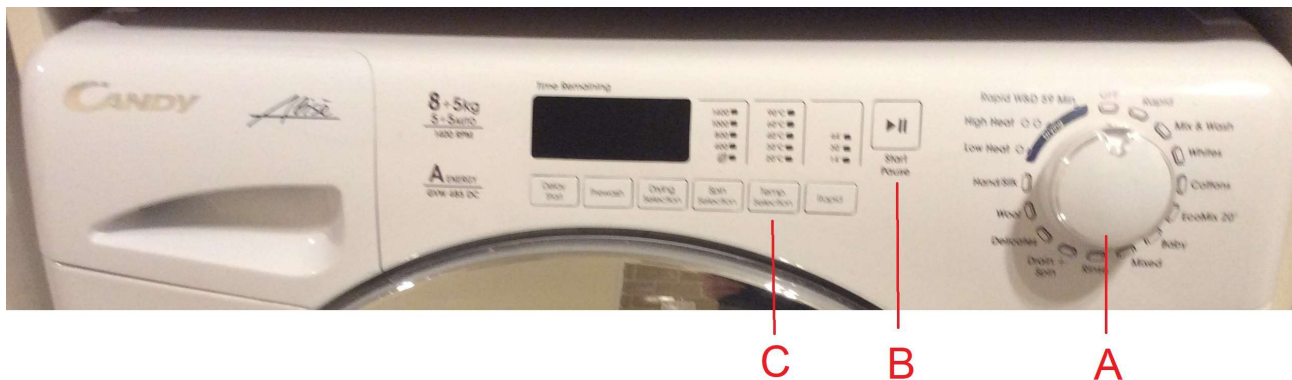

Quick steps to dry

- A - Turn dial to “LOW HEAT” or “HIGH HEAT”
- B - Press start

Quick steps to “Drain & Spin”

- A – Turn dial to “DRAIN & SPIN”
- B – Press start

Quick steps to wash

- A - Turn dial to RAPID (14 minute cycle)
- B - Temperature button to what you require (30 degree seems ok)
- C - Press start
- D - When complete, please turn dial to “DRAIN & SPIN” and press start



See the instructions manual for
full details

To Open main door, pull the
handle on the right hand side